

GB AWM 5500

- Cotone** Cotton "1/2 Carico" Half Load
- Sintetici** Synthetic "No Centrif." No Spin
- Delicati** Delicate/Wool "Anti Piega" Rinse Hold



Estimated Programme Duration refer to maximum programme temperature selection without special options.

During the selected washing programme the programme selector knob moves by steps clockwise through the phases *prewash*, *main wash*, *rinse* and *spin*. Each step takes from some seconds to several minutes.

* : optional / Yes : dosing required

Programme Selector Knob	Programme	Temperature Selector °C	Type of wash/Notes	Max Load Kg	Detergents and additives				Special options			Spin Speed rpm	Estimated Programme Duration Min.
					Pre-wash	Main Wash	Fabric Softener	Chlorine Bleach	Half Load 1/2 Carico	No Spin No Centrif.	Rinse Hold Anti Piega		
1	Cotton with prewash	Min Max. 95°	Heavily soiled, long wearing and temperature stable textiles in cotton and linen (bed linen, table linen, underwear, shirts etc.).	4.5	*	Yes	*	*	*	*	*	500	120
2	Cotton	Min Max. 95°	Slightly to normally soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen. <i>When you select the "Rapid" option, the "Half Load", the "Eco" and the "Intensive Rinse" options cannot be selected.</i>	4.5	—	Yes	*	*	*	*	*	500	110
3	Synthetic	Min Max. 60°	Slightly to normally soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton. <i>When you select the "Rapid" option, the "Half Load", the "Eco" and the "Intensive Rinse" options cannot be selected.</i>	2.0	—	Yes	*	—	*	*	*	500	85
4	Cotton short	Min Max. 40°	Slightly soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen.	2.5	—	Yes	*	—	*	*	*	500	75
4	Synthetic short	Min Max. 40°	Slightly soiled overalls and sports wear made of cotton, polyester, polyamide and blends with cotton.	2.0	—	Yes	*	—	*	*	*	500	75
5	Delicate	Min Max. 40°	Curtains and delicate clothing, dresses skirts, shirts and blouses.	1.5	—	Yes	*	—	—	*	*	500	70
6	Wool	Min Max. 40°	Only woollens with a felt-free finish, labelled with the woolmark and identified as machine washable. <i>If you select "Rinse Hold" do not leave items to soak for too long.</i>	1.0	—	Yes	*	—	—	*	—	500	60
A	Rinse + Long spin	Min	<i>With this programme you can add starch and/or fabric softener. The programme ends with an intensive spin cycle.</i>	4.5	—	—	*	—	*	*	*	500	20
B	Long spin	—	<i>In this programme spinning is intensive. Same as the spin cycle in the "Cotton" programme.</i>	4.5	—	—	—	—	—	—	—	500	15
C	Rinse + Short spin	Min	<i>In this programme spinning is gentle. Same as the spin cycle in the "Wool" programme.</i>	1.5	—	—	*	—	—	*	*	500	15
D	Short spin	—	<i>In this programme spinning is gentle. Same as the spin cycle in the "Wool" programme.</i>	1.5	—	—	—	—	—	—	—	500	10
E	Drain	—	<i>Drain only - no spinning. Alternative method of terminating programme the synthetic, delicate and wool programme and for premature removal of the laundry.</i>	—	—	—	—	—	—	—	—	—	6

CONSUMPTION DATA

Programme	Temperature Selector	Load (kg)	Water (l)	Energy (kWh)	Estimated Programme Duration
	(°C)				Min.
Cotton with prewash	95	4.5	80	2.00	120
Cotton	95	4.5	70	1.80	110
Cotton	60	4.5	70	1.20	110
Synthetics	60	2.0	60	0.90	85
Cotton short	40	2.5	65	0.70	75
Synthetics short	40	2.5	60	0.60	75
Delicate	40	1.5	80	0.60	70
Wool	40	1.0	80	0.60	65

Prewash cycle increases programme duration approximately 15 min. Consumption values were measured in normalized conditions in compliance with Standard IEC 60 456. Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash. The data on the energy label refer to the programme Cotton 60°C.

ADD DETERGENTS, CLOSE THE DOOR AND SELECT THE PROGRAMME

Add the detergents as described in the programme table or in the chapter "Detergents and Additives" in the booklet.

1. Open the tap.
2. Set the **programme selector** to the desired programme.
3. Set the **temperature selector** to the desired temperature.
4. **Special options** can be selected.
5. Check that the door is well closed and turn on the washing machine by pressing the **"ON/OFF"** button. The indicator lights up, indicating that the washing machine is on.

SELECT ANY DESIRED OPTION

"Half Load" button *1/2 Carico*

- Reduces water consumption, above all during rinsing.
- Suitable for lightly-soiled laundry and small loads (max 3 kg).

"No Spin" button *No Centrif.*

- Excludes spinning from programme, press button. Suitable for delicate laundry.

Note: with the "Cotton" and "Synthetic" programmes a short spin cycle is provided in any case, even if the exclusion has been selected, in order to optimize rinsing results.

"Rinse Hold" button *Anti Piega*

- The laundry remains in the last rinse water without progressing to the final spin cycle to avoid creasing and prevent colours from changing.
- This option is particularly recommended for the programme "Synthetic" or "Delicate".
- This function is particularly useful if you want to postpone spinning to a later time, or if you want to drain only.

Terminate the "Rinse Hold" option:

- Press the "Rinse Hold" button again; the programme will terminate automatically with the final spin cycle for the present wash programme.
If you do not wish to spin the laundry, turn the programme selector knob to the "Drain" programme.

PROGRAMME CHANGE

To reselect a programme when a cycle has already started:

1. Switch off the appliance by pressing the **"ON/OFF"** button.
2. Select the new programme, temperature and options.
3. Start the programme by pressing the **"ON/OFF"** button again.

PROGRAMME END

1. At the end of the programme the programme selector moves to the stop position.
2. To unload the washing machine wait for the door to unlock (about 2 minutes).
3. Switch off the washing machine, open the door and take out the laundry.
4. Close the tap and leave the door ajar to allow the drum to dry out.

NOTES AND INDICATIONS FOR USE

Water level

To obtain low water consumption without compromising washing results the water level within the drum may not be visible.

Cleaning the pump filter

A regular filter check and eventual cleaning is advisable.

Motor smell

Washing machine motor creates a typical electrical smell during first cycles, this is normal and disappears after a few cycles.